



BY PRO-JECT AUDIO SYSTEMS

# INSTRUCTIONS FOR USE

## Pro-Ject Stereo Box S

Dear music lover,

thank you for purchasing a PRO-JECT AUDIO amplifier.

In order to achieve maximum performance and reliability you should study these instructions for use carefully.



*Warning of a hazard for the user, the unit or possible misuse.*



*Important notice.*

 
## Safety instructions

AC outlet voltages vary from country to country. Before connecting to the mains, make sure that the voltage in your area meets the voltage requirements printed on the power supply. The power cord is used to disconnect the unit from the mains. Make sure that the power cord is easily accessible at all times. Never handle the device, the power cord/power supply while your hands are wet or damp.



Avoid letting liquids enter the device or the power supply. Never place any item containing liquid, such as a flower vase on or near the device. Never spill any liquid on the device or the power supply. Never place any naked flame sources, such as lighted candles on or near the device. The product shall not be used in damp or wet locations, next to a bathtub, sink, swimming pool or any other similar conditions.

## Connectors

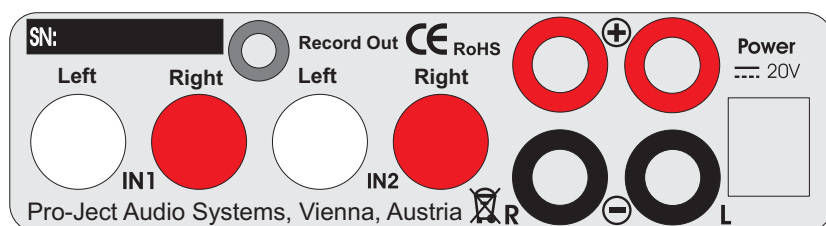

Make all connections whilst the amplifier is disconnected from the power supply.

Take care to connect the left and right channels correctly. The right channel is usually marked red, the left channel black or white.



The red speaker terminals carry the positive signal (+), the black speaker terminals the negative signal (-). Make sure the polarity of the connection is correct at each end of the cables.

Only connect one loudspeaker with an impedance not less than 4 ohms per channel.

Never use any other power supply than the one supplied with the unit.

## Inputs

Line level sources such as CD player radio or TV can be connected to the input sockets marked IN1 or IN2.

## Connection to the speakers

The output terminals accept loudspeaker cables terminated with 4mm Ø Banana plugs, spades connectors or naked wire.


## Record output, connecting a headphone amplifier

Record Out connects an analogue record device ore a Pro-Ject Head Box headphone amplifier.

 


*Record Out provides a fixed output level.*

## Mains power connection

Connect the low voltage plug from the power supply to the **Power**  20V socket before connecting the power supply to the mains.

## Remote control

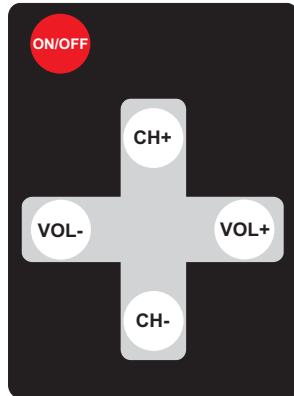

turns the unit on or back into standby



and



adjust the sound volume




and



select the inputs

## Front panel controls

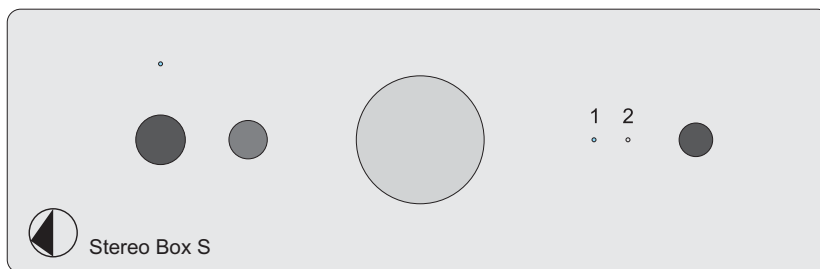 

## To switch on from standby or to standby

The push button (press and hold to switch into standby mode) on the left hand side of the front panel turns the unit on or back into standby. The blue LED above the stand-by push button shows that the unit is switched on.

## Input selector

After the unit is powered on, pressing the push button on the right, selects the **In 1** and **In 2** inputs in turn.

The optional input expander Pro-Ject Switch Box S provides three more inputs. For further details please see the user guide of the Pro-Ject Switch Box S.

## Volume

Adjust the volume to the desired level, using the large knob on the front panel.

## Replacing batteries

Proceed as follows:

- Unlock and slide open the battery case cover
- Replace the battery.  
Make sure the battery is the right way round !
- Close the battery case cover



Battery type: 1 x CR2032 / 3V or 1 x CR2025 / 3V



*Do not dispose the batteries as ordinary domestic refuse. Please dispose your exhausted batteries at the appropriate collection sites - usually located at supermarkets and drugstores.*

## Technical specifications Pro-Ject Stereo Box S

|  |  |
|--|--|
| Power output:                          | 2 x 25W/30W at 8 ohms/4 ohms (both channels driven)              |
| Frequency response:                    | 20Hz - 20kHz ( $\pm 0,2$ dB)                                     |
| Channel separation:                    | >40dB at 20kHz   |
| Noise floor:                           | >-100dB (A weighted)   |
| THD:                                   | <0,05% at 10W  |
| Gain:                                  | 22dB   |
| Line-level inputs:                     | 2 pairs RCA/phono sockets  |
| Input impedance:                       | 20kohms  |
| Record Out:                            | 3-pole 3,5mm co-axial jack                                       |
| Speaker connectors:                    | 4mm Ø banana plugs, spades connectors or naked wire              |
| Outboard power supply:                 | 20V/3A DC (peak 7A DC), suitable for your country's mains supply |
| Power consumption:                     | 3A DC, <1W in standby  |
| Replacement battery remote control:    | 1 x CR2032 / 3V or 1 x CR2025 / 3V                               |
| Dimensions W x H x D (D with sockets): | 103 x 36 x 104 (122)mm   |
| Weight:                                | 720g without power supply  |

## Service

Should you encounter a problem which you are not able to alleviate or identify, please contact your dealer for further advice. Only when the problem cannot be resolved there should the unit be sent to the responsible distributor in your country.

## Warranty



*The manufacturer accepts no responsibility for damage caused by not adhering to these instructions for use. Modification or change to any part of the product by unauthorized persons release the manufacturer from any liability over and above the lawful rights of the customer.*

PRO-JECT is a Registered Trademark of H. Lichtenegger.

This guide was produced by: Audio Trade GmbH  
Copyright © 2011. All rights reserved.

The information was correct at the time of going to press. The manufacturer reserves the right to make changes to the technical specification without prior notice as deemed necessary to uphold the ongoing process of technical development.