

# Owner's Manual

MOON Evolution Series

610 LP

*Dual-Mono Phono Preamplifier*




M O O N

# MOON 610LP Dual-Mono Phono Preamplifier

---

## Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or another apparatus that produces heat.
9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for safety. If the provided plug does not fit into the outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. Unplug mains cord during transportation.
11. Only use attachments and accessories specified by the manufacturer.
12.  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power cord or plug has been damaged; liquid has been spilled or objects have fallen into the apparatus; or the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. No naked flame sources, such as candles, should be placed on the apparatus.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK,  
DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



# MOON 610LP Dual-Mono Phono Preamplifier

---

## Important Safety Instructions (cont'd)



The lightning flash with the arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



Marking by the "CE" symbol (shown left) indicates compliance of this device with the EMC (Electromagnetic Compatibility) and LVD (Low Voltage Directive) standards of the European Community

***Please read all instructions and precautions carefully and completely before operating your Simaudio MOON 610LP Phono Preamplifier.***

1. **ALWAYS** disconnect your entire system from the AC mains before connecting or disconnecting any cables, or when cleaning any component.
  2. The MOON 610LP must be terminated with a three-conductor AC mains power cord which includes an earth ground connection. To prevent shock hazard, all three connections must **ALWAYS** be used. Connect the MOON 610LP only to an AC source of the proper voltage; Both the shipping box and rear panel serial number label will indicate the correct voltage. Use of any other voltage will likely damage the unit and void the warranty.
  3. AC extension cords are **NOT** recommended for use with this product.
  4. **NEVER** use flammable or combustible chemicals for cleaning audio components.
  5. **NEVER** operate the MOON 610LP with any covers removed. There are no user-serviceable parts inside. An open unit, especially if it is still connected to an AC source, presents a potentially lethal shock hazard. Refer all questions to authorized service personnel only.
  6. **NEVER** wet the inside of the MOON 610LP with any liquid. If a liquid substance does enter your MOON 610LP, immediately disconnect it from the AC mains and take it to your MOON dealer for a complete check-up.
  7. **NEVER** spill or pour liquids directly onto the MOON 610LP.
  8. **NEVER** block air flow through ventilation slots or heatsinks.
  9. **NEVER** bypass any fuse.
  10. **NEVER** replace any fuse with a value or type other than those specified.
  11. **NEVER** attempt to repair the MOON 610LP. If a problem occurs contact your MOON dealer.
  12. **NEVER** expose the MOON 610LP to extremely high or low temperatures.
  13. **NEVER** operate the MOON 610LP in an explosive atmosphere.
  14. **ALWAYS** keep electrical equipment out of reach of children.
  15. **ALWAYS** unplug sensitive electronic equipment during lightning storms.
-

## Table of Contents

Congratulations .....	5
Unpacking and Warnings .....	5
Introduction .....	6
Installation & Placement .....	6
Bottom Panel Layout .....	7
Cartridge Loading Adjustments .....	8
Rear Panel Connections .....	11
Balanced Operation .....	12
Operating the 610LP .....	12
Specifications .....	13

[www.simaudio.com](http://www.simaudio.com)

Simaudio Ltd., 1345 Newton Road  
Boucherville, Quebec J4B 5H2 CANADA

Date Code: 20121226

---

# MOON 610LP Dual-Mono Phono Preamplifier

---

## Congratulations!

Thank you for selecting the **MOON 610LP Dual-Mono Phono Preamplifier** as a part of your music/cinema system. This component has been designed to offer state-of-the-art high-end performance in an elegant package, while retaining all the sonic hallmarks on which Simaudio has made its reputation. We have spared no effort to ensure that it is amongst *the finest* phono preamplifiers available. We have been building high-performance audio equipment for over 25 years, and the know-how gained through our cumulative experience is an important reason why **MOON** audio components are so musically satisfying.

The performance of your **610LP** will continue to improve during the first 500 hours of listening. This is the result of a “break-in” period required for the numerous high quality electronic parts used throughout this phono preamplifier.

Before setting up your new **MOON 610LP**, we encourage you to please read this manual thoroughly to properly acquaint yourself with its features. We hope you enjoy listening to the **MOON 610LP Phono Preamplifier** as much as the pride we have taken in creating this fine audio product. We understand the power and emotion of music and build our products with the goal of faithfully capturing these elusive qualities.

*The information contained in this manual is subject to change without notice. The most current version of this manual is available on our official website at <http://www.simaudio.com/manuals.htm>*

## Unpacking

The **MOON 610LP Phono Preamplifier** should be removed from its box with care.

The following accessories should be included inside the box with your phono preamplifier:

- ✓ *AC power cable*
- ✓ *One (1) pen shaped plastic hand tool for making DIP-switch adjustments*
- ✓ *This owner's manual*
- ✓ *Warranty and product registration information (USA and Canada only)*

As soon as the phono preamplifier is safely removed from its box and placed down, perform a thorough physical inspection and report any physical damage to your dealer immediately. We suggest that you keep all of the original packaging, storing it in a safe, dry place in the event that you're required to transport this product. The customized packaging is specially designed to protect the **MOON 610LP Phono Preamplifier** from potential damage that may occur during shipping.

Please write the serial number of your new Simaudio **MOON 610LP** in the space provided below for future reference.

Serial No.: \_\_\_\_\_

# MOON 610LP Dual-Mono Phono Preamplifier

---

## Introduction

Your **MOON 610LP Phono Preamplifier** incorporates many significant design features to achieve its “world class” level of performance. This is an abbreviated list of the more important features:

The **oversized power supply**, located within the main chassis, is housed in an **isolated enclosure** that is constructed from **satin coated 14-gauge steel** to eliminate all traces of AC artifacts. Power supply featuring a **"pi-type" filter** using 40,000uF of capacitance and **dual choke inductance** (2x 200mH). The result is a power supply with a noise floor of -150dB related to 1.0V, DC - 100kHz.

Power supply voltage regulation includes **i<sup>2</sup>DCf** (Independent Inductive DC Filtering); 1 inductor for each and every chip (i.e. OpAmp, etc.) in the audio circuit's signal path – **24 stages in all**.

**Adjustable impedance loading** - 64 available settings from 12.1Ω to 47kΩ

**Adjustable capacitance loading** - 16 available settings from 0pF to 1120pF

**Adjustable gain settings** - 16 available settings from 40dB to 70dB

**Selectable equalization curves** for both the **RIAA** and the **IEC** standards

**Customized parts** include **metallized polypropylene film capacitors** with very tight tolerances of 1%

**Four-layer PCB tracings** with dedicated ground and power planes using pure copper for low impedance characteristics. The advantages include better circuit layouts resulting in a much shorter signal path and a vastly improved signal-to-noise ratio

**Accurate matching** of the very finest quality electronic components in a symmetrical circuit design

The **shortest possible signal path** for a faster transient response and the lowest possible noise floor.

## Installation & Placement

The **610LP** is more sensitive than most other types of audio components to EMI (electro-magnetic interference) from power supplies and motors. Consequently, it should be placed at a minimum distance of 18 inches from power supplies, turntables, tape decks, AC line filters, etc. As well, *You should never place another component directly on top of this phono preamplifier.*

In the event that the surface you have chosen isn't perfectly level, each of the four (4) legs of your **610LP** are height adjustable; carefully using your fingers, you can either raise each leg by turning the cone underneath clockwise, or lower each leg by turning it counterclockwise.

We strongly recommend that you leave these cones mounted to the component at all times for reasons related to both performance and aesthetics.

## MOON 610LP Dual-Mono Phono Preamplifier

### Bottom Panel Layout

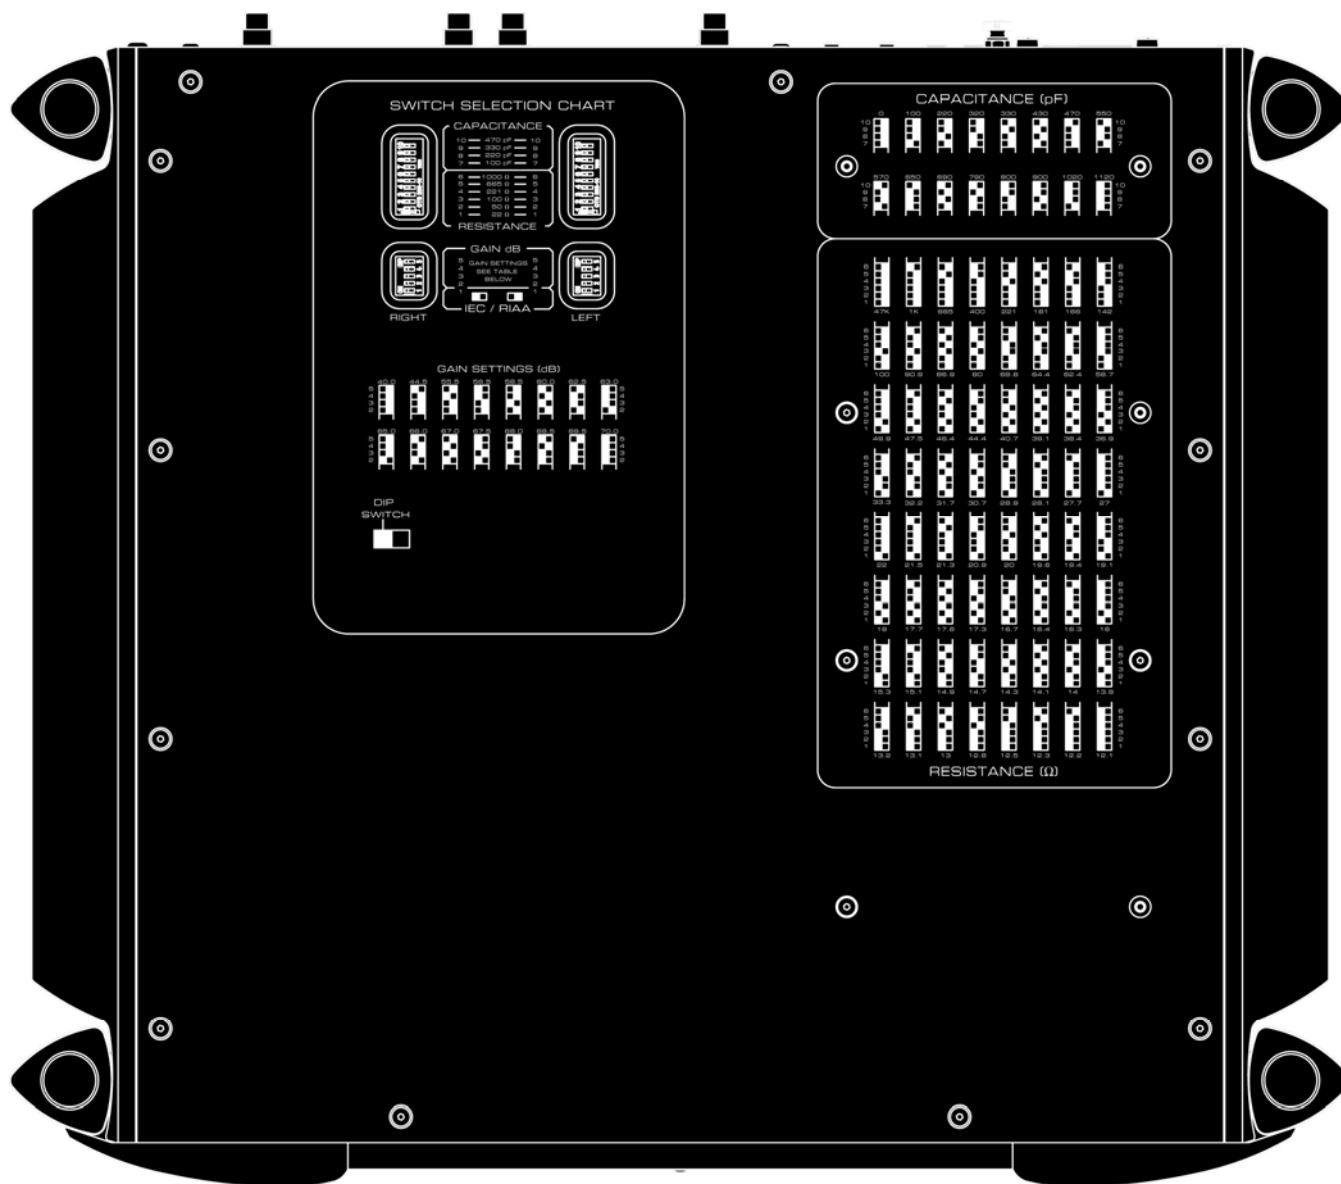



Figure 1: MOON 610LP Bottom Panel layout

Settings for cartridge resistance loading, cartridge capacitance loading, gain and equalization curve are all done using white colored DIP switches located on the **610LP**'s bottom panel as shown above in figure 1. There are two (2) banks of DIP switches – The upper bank provides for the capacitance and resistance loading adjustments; the lower bank for gain level and equalization curve settings. Examples of the DIP switch positions for all available settings are clearly shown on the bottom panel – below and to the right of the actual DIP switches. Since the **MOON 610LP** is a genuine dual-mono design, there are 2 sets of DIP switches for each adjustment – one each for the left and right channels.

# MOON 610LP Dual-Mono Phono Preamplifier
 
## Cartridge Loading Adjustments

Prior to making any of these adjustments, always disconnect the AC power cord and all interconnects from **MOON 610LP**. We strongly recommend using the *pen shaped plastic hand tool* that we have included with your **610LP** as it was specifically designed for this purpose. Using another tool made from a material other than plastic may damage the DIP switches and/or scratch the painted surface on the bottom of the **610LP**. Finally, to achieve the best possible sonic performance, it is absolutely necessary that all settings be identical for both the left and the right channels.



In the following examples, *the color white always indicates the position - left ('ON') or right ('OFF') of the DIP switch*. In the example to the left, the DIP switch is in the left position ('ON'). *This is to be consistent with the actual white color of these switches*.

### Capacitance Loading:

There are sixteen (16) unique capacitance loading settings available using DIP switches 7 through 10, located at the top of the upper DIP switch bank. The range of available settings begins at 0pF and ends at 1120pF:

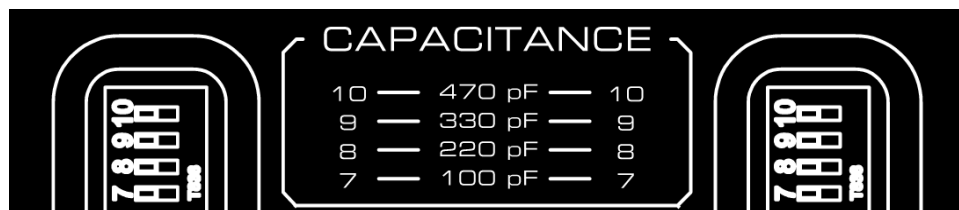


Figure 2: Left and right channel DIP switches for capacitance loading adjustments

The factory default is 100 pF, whereby DIP switches 10, 9, and 8 are all in the right ('OFF') position and DIP switch 7 is in the left position ('ON') as seen in the example to the right. This setting would be applicable for most moving magnet cartridges.



In the event that you are using a moving coil cartridge, you will most likely want to set the capacitance loading to 0pF. This is done by positioning all 4 DIP switches (7, 8, 9, & 10) to the right position ('OFF') as seen in the example to the right.



A comprehensive diagram of the DIP switch combinations for all 16 available capacitance loading settings can be seen on the bottom panel, immediately to the right of the switches. Finally, the values written beside the DIP switch number represent the capacitance load if only that switch is in the left position ('ON'). For example, when only switch 10 is in the left position ('ON'), the load value will be 470pF; when only switch 9 is in the left position ('ON'), the load value will be 330pF; and finally when only switch 8 is in the left position ('ON'), the load value will be 220pF.



# MOON 610LP Dual-Mono Phono Preamplifier

## Internal Settings (cont'd)

### Resistance Loading:

There are sixty-four (64) unique resistance loading settings available using DIP switches 1 through 6, located at the bottom of the upper DIP switch bank. The range of available settings starts at 12.1 $\Omega$  and ends at 47k $\Omega$ :


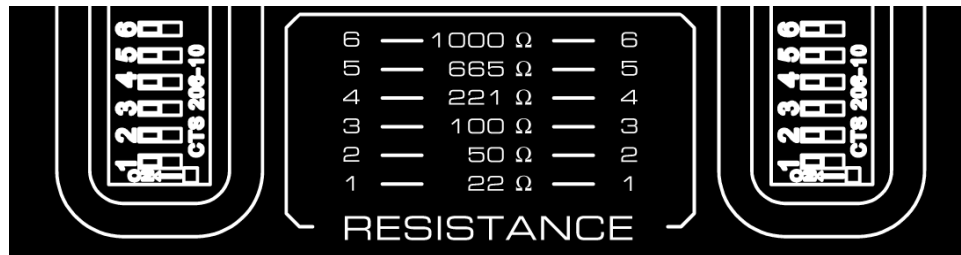


Figure 3: Left and right channel DIP switches for resistance loading adjustments

 The factory default is 47K $\Omega$ , whereby DIP switches 6, 5, 4, 3, 2 and 1 are all in the right ('OFF') position as seen in the example to the right. This setting would be applicable for most moving magnet cartridges



In the event that you are using a moving coil cartridge, you will most likely want to set the resistance loading to a much lower impedance value. For instance, in the event that your cartridge manufacturer recommends a value of 100 $\Omega$ , you would position DIP switch 3 to the left ('ON') and the other remaining switches (1, 2, 4, 5 & 6) to the right position ('OFF') as seen in the example to the right. ***We strongly recommended that you never use the 47k $\Omega$  resistive load setting for moving coil cartridges.***



A comprehensive diagram of the DIP switch combinations for all 64 available resistance loading settings can be seen on the bottom panel, immediately to the right of the switches and just below the previously mentioned capacitance settings diagram. Finally, the values written beside the DIP switch number represent the resistance load if only that switch is in the left position ('ON'). For example, when only switch 1 is in the left position ('ON'), the load value will be 22 $\Omega$ ; when only switch 4 is in the left position ('ON'), the load value will be 221 $\Omega$ ; and finally when only switch 6 is in the left position ('ON'), the load value will be 1000 $\Omega$ .

**Note:** *Choosing a loading impedance for a moving coil cartridge is not an exact science as there are many variables that can affect the manufacturer's recommended setting. Choosing the best impedance is ultimately a compromise between what sounds best to your own ears and what works best for the cartridge, based on its internal workings. When experimenting with different impedance settings, always keep in mind that a poorly loaded moving coil cartridge will result in sonic performance yielding a lack of definition, reduced bass performance, as well as aggressive upper-mid and high frequencies.*

# MOON 610LP Dual-Mono Phono Preamplifier

## Internal Settings (cont'd)

### Gain Setting:

There are sixteen (16) unique gain level settings available using DIP switches 2 through 5, located at the top of the lower DIP switch bank. The range of available settings runs from 40dB all the way up to 70.0dB:



Figure 4: Left and right channel DIP switches for gain level settings

The factory default gain level setting is 40dB whereby DIP switches 5, 4, 3 & 2 are set to the right position ('OFF'). This setting would be applicable for most moving magnet cartridges.



In the event that you are using a moving coil cartridge, you will need to increase the gain level setting. This is a general rule for determining the gain of a MC cartridge: For a low output MC cartridge (0.7mV and lower), set the gain level to at least 66dB; for a medium output MC (0.7mV to 1.5mV) set the gain level to 60dB; for a high output MC (> 1.5mV) set the gain level to 54dB. Since every audio system is different, these are just approximated values.

The example to the right show a gain level setting of 60.0dB where DIP switches 5 and 3 are in the left ('ON') position and DIP switches 2 and 4 are in the right ('OFF') position.



### Equalization Curve:

The **MOON 610LP Phono Preamplifier** is equipped with circuitry for two (2) different equalization curves; The RIAA standard and the less common IEC modified curve. The main difference is that the RIAA curve produces a flat frequency response from 20Hz to 20kHz; The IEC curve acts as a subsonic filter removing inaudible infrasonic bass *only* below 20Hz. Using DIP switch 1 on lower bank. The factory default is the RIAA curve whereby DIP switch 1 is in the right ('OFF') position. To change to the IEC curve, simply move this DIP switch to the left ('ON') position.



Figure 5: Left and right channel DIP switches for equalization curves

To determine which curve is best for you, perform this simple test: Use the **610LP** with the RIAA curve and watch the movement of your loudspeaker's bass drivers. If their motion doesn't follow the pattern of the record you're playing or you see excessive driver movement, chances are you should use the IEC curve to eliminate the subsonic information not present on the record.

## MOON 610LP Dual-Mono Phono Preamplifier

### Rear Panel Connections

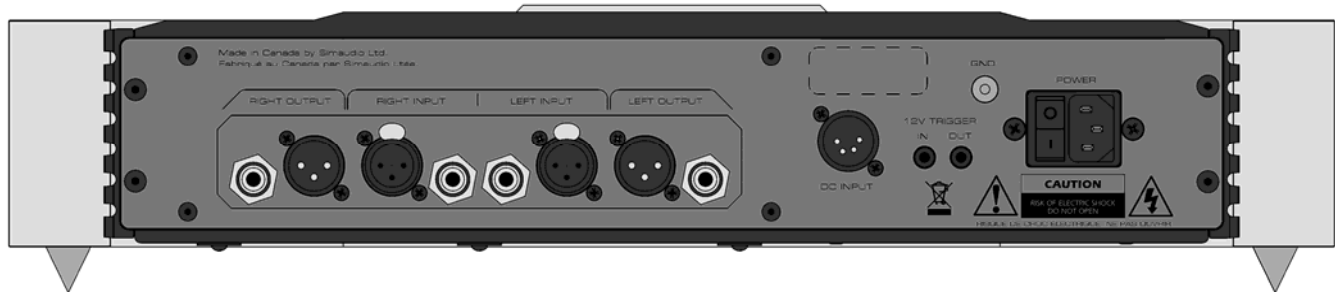


Figure 6: MOON 610LP Rear panel

The rear panel will look similar to Figure 6 (above). All audio connectors are located on the left side of the rear panel. As a result of the **MOON 610LP Phono Preamplifier's** balanced and symmetrical circuit design, the layout of these audio connectors follows the same orientation: A pair of single-ended RCA input connectors are located in the middle and on either side you will find the balanced XLR input connector for that same channel. Connect the cables from your turntable to either the RCA or XLR inputs. *The design of the 610LP allows for ONLY 1 input connection so you cannot use both types of input connectors.* Immediately to each side of the XLR input connectors are the balanced XLR output connectors. Beside each XLR output is the single-ended RCA output connector for that same channel. You can use either or both the XLR outputs and RCA outputs to connect to your preamplifier/integrated amplifier. In the event that the preamplifier/integrated amplifier you're connecting the **610LP** to has balanced inputs, it's highly advantageous to use the **610LP's** XLR outputs. This will provide you with an even better signal-to-noise ratio.

In the event that you're using the balanced XLR inputs, **you must first remove the factory installed "dummy" XLR jumpers** (see figure 7 below) from the back panel XLR connectors and store them in a safe place. These jumpers are required **ONLY** when using the single-ended RCA inputs. In the event that you decide to switch to single-ended input mode, you must reinstall the XLR jumper (between pins 1 and 3) exactly as shown below. The purpose of these jumpers is to help maintain the lowest possible noise level when not using the **610LP's** balanced input circuitry.

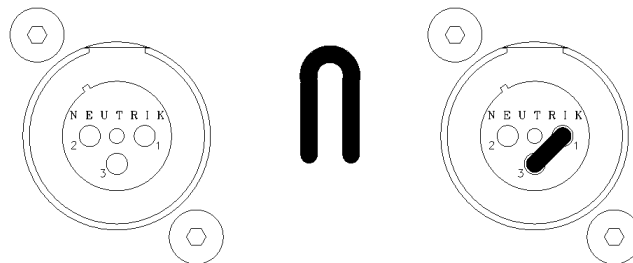


Figure 7: XLR connector without and with jumper accessory

To the right of the array of audio connectors is a 4-pin XLR connector labeled "DC Input" which is reserved for future use when an external power supply will be made available for the **MOON 610LP**. Directly to the right of the 4-pin XLR are two 12 Volt triggers, each on a 1/8" mini-jack; one input and one output, the latter for use in the event that wish you to "daisy chain" an additional component on the same trigger circuit. Finally on the far right side is the "AC Power" section with a main power switch ("0"=off, "1"=on) and IEC receptacle for the included AC power cord.

Don't hesitate to use high quality interconnect cables. Poor quality interconnect cables can degrade the overall sonic performance of your system.

# MOON 610LP Dual-Mono Phono Preamplifier

---

## Balanced Operation

When using an unbalanced interconnect, the audio signal runs through both the center wire and the shield/ground wire. Any noise picked up by this interconnect (ie. nearby magnetic fields such as an AC power cord) will be reproduced by the integrated amplifier, then heard through the loudspeakers. Conversely, a balanced interconnect has three separate conductors; one for the ground and two for the actual signal. These two signals are identical except that one is 180 degrees out of phase with the other. For example, when one conductor is carrying a signal of +2 Volts, the other will be carrying a signal of -2 Volts. When these two inverted signals on a balanced line are output from the **MOON 610LP**, any noise picked up by the interconnect will be eliminated since a differential circuit amplifies only the difference between these two signals: Noise on a balanced interconnect will be equal on both conductors and therefore not be processed.

## Operating the 610LP

We recommend that you leave your **MOON 610LP Phono Preamplifier** powered up at all times to maintain optimal performance. In the event that you plan to be away from your home for a few days, powering off the Phono Preamplifier may not be a bad idea. Once fully "broken-in", please keep in mind that your **610LP** will require several hours of playing time before it reaches its peak performance after you've powered it up again.

### **Making the AC Connection**

Connect the supplied AC power cable to the IEC receptacle, located on the rear panel of the phono preamplifier's chassis. Ensure that the AC wall outlet you use has a functioning ground. For the best sonic performance, it is preferable that you plug your **MOON 610LP** directly into a dedicated AC outlet and avoid using an extension cord.

In order to obtain the maximum performance from your audio system, we strongly recommend that the detachable power cord not come into physical contact with any of the interconnect cables running to and from your **610LP**. In the event that this can't be avoided, you should ensure that any cables coming into contact with each other are crossed at ninety degree angle to minimize the contact area.

### **Powering up your MOON 610LP for the first time**

Prior to turning this preamplifier on for the first time, make sure that every cable is properly connected to avoid any problems. Then turn on your phono preamplifier in the following manner:

- 1) Flick the main rocker switch labeled "POWER" to the '1' (on) position on the rear of the controller chassis.
- 2) Press the push button labeled "Standby" on the **610LP**, the blue LED will illuminate, indicating that the **610LP** is now powered up and ready for use. You are now ready to begin listening to music.

### **On and Off Sequence**

To avoid having any annoying noises (ie. "thumps" and "pops") emanate from your speakers when powering your **610LP** on or off, you should

- 1) Always power up your **610LP** before powering up your preamplifier and/or integrated amplifier.
- 2) Always power down your **610LP** after powering down your preamplifier and/or integrated amplifier.

# MOON 610LP Dual-Mono Phono Preamplifier

---

## Specifications

Configuration .....	Fully balanced, dual-mono
Power Supply Transformer .....	25VA
Power Supply Capacitance .....	40 000 $\mu$ F
Balanced inputs .....	1 pair (XLR)
Single-ended inputs .....	1 pair (RCA)
Input Impedance - Adjustable .....	64 settings from 12.1 $\Omega$ to 47k $\Omega$
Input Capacitance - Adjustable .....	16 settings from 0pF to 1120pF
Gain Level – Adjustable .....	16 settings from 40dB to 70dB
Balanced outputs .....	1 pair (XLR)
Single-ended outputs .....	1 pair (RCA)
Input overload @ 40dB gain .....	200mV RMS (XLR) / 100mV RMS (RCA)
Input overload @ 55.5dB gain .....	30mV RMS (XLR) / 15mV RMS (RCA)
Input overload @ 60dB gain .....	20mV RMS (XLR) / 10mV RMS (RCA)
Input overload @ 65dB gain .....	10mV RMS (XLR) / 5mV RMS (RCA)
Input overload @ 70dB gain .....	5mV RMS (XLR) / 2.5mV RMS (RCA)
Signal-to-noise Ratio (full scale @ 40dB gain) .....	112dB
Signal-to-noise Ratio (full scale @ 55.5dB gain) .....	106dB
Signal-to-noise Ratio (full scale @ 60dB gain) .....	103dB
Signal-to-noise Ratio (full scale @ 65dB gain) .....	98dB
Signal-to-noise Ratio (full scale @ 70dB gain) .....	93dB
Maximum Output (1kHz @ 10K $\Omega$ ) .....	20V (XLR) / 10 Volts (RCA)
Frequency Response – RIAA & IEC Curve .....	20Hz - 20kHz ( $\pm$ 0.1dB)
Output Impedance .....	50 $\Omega$
IEC Curve Effect .....	-7dB @ 10Hz
Crosstalk @ 1kHz .....	-106dB
Intermodulation Distortion .....	< 0.002%
THD (20Hz - 20kHz) .....	< 0.001%
Power Consumption .....	10 Watts
AC Power Requirements .....	120V or 240V, 60Hz or 50Hz
Shipping Weight .....	40 lbs / 18 Kg
Dimensions (W x H x D, inches) .....	18.75 x 4.0 x 16.81

### Balanced Input Pin Assignment:

Pin 1.....	Ground
Pin 2.....	Positive
Pin 3 .....	Negative

### 12 Volt Trigger:

Logic .....	Direct (0V off, 12V on)
Jack.....	3.5mm microphone jack
Input Impedance.....	12k $\Omega$
Current Consumption.....	1mA



### Fuse Replacement:

For the 120V version use a 0.2A slow blow (5 x 20mm size).  
For the 230V version use a 0.1A slow blow (5 x 20mm size).