

ENGLISH

THERMO POT
Electric thermo pot is intended only for water boiling. For proper and safe use of the unit, read this manual carefully.

DESCRIPTION

1. "REFILL" mark
2. Water level scale
3. Water dispense button
4. Water spout
5. Control panel
6. Lid opening button
7. Steam escape holes
8. Removable upper lid
9. Lid fastening plate
10. Handle for carrying
11. Body
12. Power cord jack
13. Rotating base
14. "FULL" mark
15. Power cord

Control panel:
16. "TEMPSET" button
17. "TEMP DECLINING" indication
18. "REBOIL" button
19. "BOILING" mode indication
20. 98°C indication
21. 85°C indication
22. Unlock indication
23. "DISPENSE" button
24. "UNLOCK" button
25. 65°C indication

ATTENTION!
Improper use of the unit may cause injuries or damages of the property.

OPERATING INSTRUCTIONS

IMPORTANT SAFEGUARDS

- Before switching the unit on, read these instructions carefully.
- Make sure that your home electricity supply corresponds to the voltage of current specified on the unit.
- The power cord is equipped with a euro plug, insert it into the socket with secure grounding.
- In order to avoid risk of fire, do not use adapters while connecting the appliance to the outlet.
- Do not plug or unplug the unit with wet hands, it is not allowed to electric shock or injuries.
- Hold the plug not the cord while unplugging the unit.
- Do not switch on the unit if it is empty.
- Never leave the operating unit unattended.
- Do not use the unit outdoors.
- Do not drop or decline the unit. In order to avoid getting burns, do not turn over the thermo pot.
- Use the thermo pot only for water boiling, do not use to heat or boil other liquids.
- Provide that water level is not below the "REFILL" mark and not higher than the "FULL" mark.
- Do not fill the thermo pot putting it under tap water - use a special cup for it.
- Put the unit on the flat stable surface.
- Do not use the unit near walls and furniture. Steam that goes out may lead to deformation or other damages of the walls and furniture.
- Do not use the unit near heat sources or open flame.
- Close supervision is necessary when children or disabled persons are near the unit. This unit is not intended for use by children or disabled persons unless they are given all necessary instructions on safety measures and information about danger, which can be caused by improper use of the unit.
- Never leave children to use the unit as a toy.
- Keep the unit out of reach of children.
- Provide that the power cord is not hanging over the table and make sure that it does not touch heated surfaces.
- Do not open the lid while boiling and do not supply water.
- Do not rotate the unit while supplying water.
- Do not make efforts to close the lid. Close the lid firmly.
- Keep your hands away from steam openings otherwise you can get burns. Do not block steam openings with foreign objects.
- Do not touch hot surfaces of the thermo pot.
- When the thermo pot is filled with the thermo pot filled with boiling water, do not touch the lid opening button. Make sure that the lid is closed and locked.
- Do not carry the lid while holding the lid opening button.
- To pour out the remaining hot water, remove the lid. Be careful while pouring out hot water.
- In order to avoid electric shock, do not immerse the unit into water or other liquids.
- Always switch off and unplug the unit if it is not being used or before cleaning.
- Do not wash the unit in a dish washing machine.
- Before taking the unit away for keeping, unplug it, pour out water and let it cool down for 5 minutes.
- Regularly check the power cord and the plug.
- Do not use the thermo pot if there are damages in the power cord.
- Do not repair the unit yourself. It may cause fire, electric shock, or injuries. If there are some damages in the unit, contact an authorized service center.
- The unit is intended for household use only.

FIRST USAGE
1. Unpack the thermo pot.
2. Before switching on the unit, make sure that your home electricity supply corresponds to the voltage of current specified on the unit.

3. Open the lid (8), by pressing the (6) button and holding the lid.
4. Fill the pot with water, using a special cup, do not overfill, fill to the (14) "FULL" mark.
5. Insert the power cord plug (15) into the outlet (12) on the case, and the plug into the socket. The thermo pot will switch on into the boiling mode, the (19) "BOILING" indication will light up on the control panel (5).
6. After water starts boiling, the unit will switch to the temperature keeping mode, the indication (21) will be flashing.
7. Pour out water, press the (24) "UNLOCK" button to unlock water dispensing pump, the indication (22) will light up.

- Put a corresponding cup under the water spout (4), press the (3) dispense button.
- Second option: put a corresponding cup under the water spout (4) and press the (23) "DISPENSE" button.

Note: Water dispensing is performed only with the lighting indication (22).

- Put the plug out of the socket.
- Press the lid opening button (6) and hold it, lift the lid (8) and put yourself towards, remove the lid (8). To set the lid (8) on its place, match the rear part of the lid (8) with the fastening place (9), close the lid (8).
- Pour out the remaining water from the thermo pot.

Attention! During dispensing water be careful not to get burns from steam and hot water. Note: when the water is pressed on the control panel, water level scale indication will light up, for about 40 seconds.

USING THE THERMO POT

- Fill the thermo pot with water and plug it in. The thermo-pot will switch on into the boiling mode, the (19) "BOILING" indication will light up on the control panel (5).
- After water starts boiling, the unit will switch to the temperature keeping mode, the indication (21) will be flashing.
- Press the (16) "TEMPSET" button to select water temperature, the corresponding indication (20, 21 or 25) will be flashing. When water temperature matches the preset temperature, the indication (20, 21 or 25) is lighting, you can continue with, further decrease of the temperature the heating mode will switch on, the (19) "BOILING" indication will light up.
- In the temperature keeping mode, when one of the indications (20, 21 or 25), when the temperature can switch on the reboiling mode. Press the (18) "REBOIL" button, the indication (19) "BOILING" will light up.
- The thermo pot will switch off the thermo pot in the temperature keeping mode, press the (18) "REBOIL" button twice, in the boiling mode – once, the indication (17) "TEMP DECLINING" will light up.
- When water goes below the (11) "REFILL" mark, open the lid (8) and refill water, do not fill the unit with water above the (15) "FULL" mark.
- Hot water is supplied in two ways:
 - 1. Press the (3) dispense button, the (23) "DISPENSE" button.
 - 2. Press the (23) "DISPENSE" button is pressed.
- Hot water is supplied in two ways:
 - 1. Press the (3) dispense button, the (23) "DISPENSE" button.
 - 2. Press the (23) "DISPENSE" button is pressed.

Attention!
Water is dispensed only when the (22) indication is on, lock/unlock is switched on by the (24) "UNLOCK" button. If during 10 seconds after the (24) "UNLOCK" button is pressed, water supply will not be performed, the thermo pot locking will switch on automatically, the indication (22) will go out.

- After use, pour out water from the unit, unplug it, let the unit cool down completely and take it away for keeping.
- CLEANING AND CARE**
 - Before cleaning, unplug the unit, pour out water from the unit, and let the unit cool down completely.
 - Wipe the outer surfaces of the unit with a damp cloth. Use soft detergents to remove dirt; do not use abrasive abrasives.
 - Do not immerse the thermo pot into water or other liquids.
 - Do not wash the unit in a dish washing machine.

Spots on the inner surface of the thermo pot.
Under the influence of different additives, contained in water, inner surface may change its color. You can remove such spots using citric acid or vinegar.

- To remove lemon taste or vinegar taste, boil water and pour it away. Repeat the procedure until the taste disappears.
- Scale removal**
 - Scale, appearing inside the pot, influences water taste, and disturbs heat exchange between water and the heating element that can lead to its overheating and malfunction.
 - To remove scale, fill the pot with water with vinegar dissolved in it in proportion 2:1 to the maximal mark. Boil water and leave the unit for a night. In the morning pour out water, fill the pot with water till max, boil it and pour out water.
 - Always switch off and unplug the unit if it is not being used or before cleaning.
- Do not wash the unit in a dish washing machine.
- Before taking the unit away for keeping, unplug it, pour out water and let it cool down for 5 minutes.
- Regularly check the power cord and the plug.
- Do not use the thermo pot if there are damages in the power cord.

Do not repair the unit yourself. It may cause fire, electric shock, or injuries. If there are some damages in the unit, contact an authorized service center.

Specifications
Power supply: 220-240 V ~ 50 Hz
Maximal power: 750 W
Maximal capacity: 4 l

THE MANUFACTURER RESERVES THE RIGHT TO CHANGE THE DEVICE'S CHARACTERISTICS WITHOUT PRIOR NOTICE.

Service life of the unit - 3 years

GUARANTEE
Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be presented along with the appliance.

THE MANUFACTURER RESERVES THE RIGHT TO CHANGE THE DEVICE'S CHARACTERISTICS WITHOUT PRIOR NOTICE.

Service life of the unit - 3 years

DEUTSCH

THERMOPOT
Der elektrische Teekessel-Wärmebehälter (Thermopot) ist nur für Wasserdessen vorgesehen. Um das Gerät richtig und sicher zu verwenden, untersuchen Sie aufmerksam die Betriebsanleitung.

BESCHREIBUNG

1. Markierung des Wassermergers «REFILL»
2. Wasserstand-Skala
3. Knopf für Einschaltung der Wasserrzuführung (3).
4. Wasserhahn
5. Bedienungsplatte
6. Knopf zum Deckelaufmachen
7. Dampfabfuhr
8. Abnehmbarer Oberdeckel
9. Platz für Deckelhalterung
10. Abnehmbarer oberer Deckel
11. Gehäuse
12. Anschluss für den Anschluss des Netzkabels
13. Drehbares Gestell
14. Markierung des maximalen Wasserstandes «FULL»
15. Netzkabel

Bedienungsplatte:
16. Knopf für die Temperaturauswahl der Wasserrwärmerung «TEMPSET/Temporaturauswahl»
17. Anzeige der zeitweiligen Abschaltung/Abschaltung «TEMP DECLINING/Abschaltung/Abschaltung»
18. Knopf für wiederholtes Sieden/Abschaltung «RE-BOIL/Sieden/wiederholtes Sieden»
19. Anzeige des Modus des Wasseressens «BOILING/Kochen»
20. 98°C Anzeige
21. 85°C Anzeige
22. Unlock-Anzeige
23. "DISPENSE" Button
24. "UNLOCK" Button
25. 65°C Anzeige

Control panel:
16. "TEMPSET" button
17. "TEMP DECLINING" indication
18. "REBOIL" button
19. "BOILING" mode indication
20. 98°C indication
21. 85°C indication
22. Unlock indication
23. "DISPENSE" button
24. "UNLOCK" button
25. 65°C indication

ATTENTION!

Improper use of the unit may cause injuries or damages of the property.

OPERATING INSTRUCTIONS

IMPORTANT SAFEGUARDS

- Before switching the unit on, read these instructions carefully.
- Make sure that your home electricity supply corresponds to the voltage of current specified on the unit.
- The power cord is equipped with a euro plug, insert it into the socket with secure grounding.
- In order to avoid risk of fire, do not use adapters while connecting the appliance to the outlet.
- Do not plug or unplug the unit with wet hands, it is not allowed to electric shock or injuries.
- Hold the plug not the cord while unplugging the unit.
- Do not switch on the unit if it is empty.
- Never leave the operating unit unattended.
- Do not use the unit outdoors.
- Do not drop or decline the unit. In order to avoid getting burns, do not turn over the thermo pot.
- Use the thermo pot only for water boiling, do not use to heat or boil other liquids.
- Provide that water level is not below the "REFILL" mark and not higher than the "FULL" mark.
- Do not fill the thermo pot putting it under tap water - use a special cup for it.
- Put the unit on the flat stable surface.
- Do not use the unit near walls and furniture. Steam that goes out may lead to deformation or other damages of the walls and furniture.
- Do not use the unit near heat sources or open flame.
- Close supervision is necessary when children or disabled persons are near the unit. This unit is not intended for use by children or disabled persons unless they are given all necessary instructions on safety measures and information about danger, which can be caused by improper use of the unit.
- Never leave children to use the unit as a toy.
- Keep the unit out of reach of children.
- Provide that the power cord is not hanging over the table and make sure that it does not touch heated surfaces.
- Do not open the lid while boiling and do not supply water.
- Do not rotate the unit while supplying water.
- Do not make efforts to close the lid. Close the lid firmly.
- Keep your hands away from steam openings otherwise you can get burns. Do not block steam openings with foreign objects.
- Do not touch hot surfaces of the thermo pot.
- When the thermo pot is filled with the thermo pot filled with boiling water, do not touch the lid opening button. Make sure that the lid is closed and locked.
- Do not carry the lid while holding the lid opening button.
- To pour out the remaining hot water, remove the lid. Be careful while pouring out hot water.
- In order to avoid electric shock, do not immerse the unit into water or other liquids.
- Always switch off and unplug the unit if it is not being used or before cleaning.
- Do not wash the unit in a dish washing machine.
- Before taking the unit away for keeping, unplug it, pour out water and let it cool down for 5 minutes.
- Regularly check the power cord and the plug.
- Do not use the thermo pot if there are damages in the power cord.
- Do not repair the unit yourself. It may cause fire, electric shock, or injuries. If there are some damages in the unit, contact an authorized service center.
- The unit is intended for household use only.

FIRST USAGE
1. Unpack the thermo pot.
2. Before switching on the unit, make sure that your home electricity supply corresponds to the voltage of current specified on the unit.

3. Open the lid (8), by pressing the (6) button and holding the lid.
4. Fill the pot with water, using a special cup, do not overfill, fill to the (14) "FULL" mark.
5. Insert the power cord plug (15) into the outlet (12) on the case, and the plug into the socket. The thermo pot will switch on into the boiling mode, the (19) "BOILING" indication will light up on the control panel (5).
6. After water starts boiling, the unit will switch to the temperature keeping mode, the indication (21) will be flashing.
7. Pour out water, press the (24) "UNLOCK" button to unlock water dispensing pump, the indication (22) will light up.

Attention!
Water is dispensed only when the (22) indication is on, lock/unlock is switched on by the (24) "UNLOCK" button. If during 10 seconds after the (24) "UNLOCK" button is pressed, water supply will not be performed, the thermo pot locking will switch on automatically, the indication (22) will go out.

- After use, pour out water from the unit, unplug it, let the unit cool down completely and take it away for keeping.
- CLEANING AND CARE**
 - Before cleaning, unplug the unit, pour out water from the unit, and let the unit cool down completely.
 - Wipe the outer surfaces of the unit with a damp cloth. Use soft detergents to remove dirt; do not use abrasive abrasives.
 - Do not immerse the thermo pot into water or other liquids.
 - Do not wash the unit in a dish washing machine.

Spots on the inner surface of the thermo pot.
Under the influence of different additives, contained in water, inner surface may change its color. You can remove such spots using citric acid or vinegar.

Scale removal
Scale, appearing inside the pot, influences water taste, and disturbs heat exchange between water and the heating element that can lead to its overheating and malfunction.

DEUTSCH

THERMOPOT
Электрический термочайник предназначен только для кипячения воды. Для того чтобы правильно и безопасно пользоваться устройством, внимательно изучите данное руководство.

ОПИСАНИЕ

1. Отметка необходимости долива воды «REFILL»
2. Шкала уровня воды
3. Кнопка включения подачи воды
4. Носик слива воды
5. Панель управления
6. Кнопка открытия крышки
7. Отсек выхода пара
8. Алюминевая крышка
9. Место крепления крышки
10. Телескопическая стойка
11. Корпус
12. Разъем для подключения сетевого шнура
13. Вращающаяся подставка
14. Отметка максимального уровня «FULL»
15. Сетевой шнур

Панель управления:
16. Кнопка выбора температуры подогрева воды «TEMPSET/Выбор температуры»
17. Индикатор временного отключения/остывания «TEMP DECLINING/Отключение/Остывание»
18. Кнопка повторного кипячения/отключения «RE-BOIL/Кипячение/Повторное кипячение»
19. Индикатор режима кипячения воды «BOILING/Кипячение»
20. 98°C указание температуры кипения
21. 85°C указание температуры кипения
22. Индикатор температуры кипения
23. Индикатор температуры кипения
24. Кнопка открытия крышки
25. Индикатор температуры кипения

Control panel:
16. "TEMPSET" button
17. "TEMP DECLINING" indication
18. "REBOIL" button
19. "BOILING" mode indication
20. 98°C indication
21. 85°C indication
22. Unlock indication
23. "DISPENSE" button
24. "UNLOCK" button
25. 65°C indication

ATTENTION!

Improper use of the unit may cause injuries or damages of the property.

OPERATING INSTRUCTIONS

IMPORTANT SAFEGUARDS

- Before switching the unit on, read these instructions carefully.
- Make sure that your home electricity supply corresponds to the voltage of current specified on the unit.
- The power cord is equipped with a euro plug, insert it into the socket with secure grounding.
- In order to avoid risk of fire, do not use adapters while connecting the appliance to the outlet.
- Do not plug or unplug the unit with wet hands, it is not allowed to electric shock or injuries.
- Hold the plug not the cord while unplugging the unit.
- Do not switch on the unit if it is empty.
- Never leave the operating unit unattended.
- Do not use the unit outdoors.
- Do not drop or decline the unit. In order to avoid getting burns, do not turn over the thermo pot.
- Use the thermo pot only for water boiling, do not use to heat or boil other liquids.
- Provide that water level is not below the "REFILL" mark and not higher than the "FULL" mark.
- Do not fill the thermo pot putting it under tap water - use a special cup for it.
- Put the unit on the flat stable surface.
- Do not use the unit near walls and furniture. Steam that goes out may lead to deformation or other damages of the walls and furniture.
- Do not use the unit near heat sources or open flame.
- Close supervision is necessary when children or disabled persons are near the unit. This unit is not intended for use by children or disabled persons unless they are given all necessary instructions on safety measures and information about danger, which can be caused by improper use of the unit.
- Never leave children to use the unit as a toy.
- Keep the unit out of reach of children.
- Provide that the power cord is not hanging over the table and make sure that it does not touch heated surfaces.
- Do not open the lid while boiling and do not supply water.
- Do not rotate the unit while supplying water.
- Do not make efforts to close the lid. Close the lid firmly.
- Keep your hands away from steam openings otherwise you can get burns. Do not block steam openings with foreign objects.
- Do not touch hot surfaces of the thermo pot.
- When the thermo pot is filled with the thermo pot filled with boiling water, do not touch the lid opening button. Make sure that the lid is closed and locked.
- Do not carry the lid while holding the lid opening button.
- To pour out the remaining hot water, remove the lid. Be careful while pouring out hot water.
- In order to avoid electric shock, do not immerse the unit into water or other liquids.
- Always switch off and unplug the unit if it is not being used or before cleaning.
- Do not wash the unit in a dish washing machine.
- Before taking the unit away for keeping, unplug it, pour out water and let it cool down for 5 minutes.
- Regularly check the power cord and the plug.
- Do not use the thermo pot if there are damages in the power cord.
- Do not repair the unit yourself. It may cause fire, electric shock, or injuries. If there are some damages in the unit, contact an authorized service center.
- The unit is intended for household use only.

FIRST USAGE
1. Unpack the thermo pot.
2. Before switching on the unit, make sure that your home electricity supply corresponds to the voltage of current specified on the unit.

3. Open the lid (8), by pressing the (6) button and holding the lid.
4. Fill the pot with water, using a special cup, do not overfill, fill to the (14) "FULL" mark.
5. Insert the power cord plug (15) into the outlet (12) on the case, and the plug into the socket. The thermo pot will switch on into the boiling mode, the (19) "BOILING" indication will light up on the control panel (5).
6. After water starts boiling, the unit will switch to the temperature keeping mode, the indication (21) will be flashing.
7. Pour out water, press the (24) "UNLOCK" button to unlock water dispensing pump, the indication (22) will light up.

Attention!
Water is dispensed only when the (22) indication is on, lock/unlock is switched on by the (24) "UNLOCK" button. If during 10 seconds after the (24) "UNLOCK" button is pressed, water supply will not be performed, the thermo pot locking will switch on automatically, the indication (22) will go out.

- After use, pour out water from the unit, unplug it, let the unit cool down completely and take it away for keeping.
- CLEANING AND CARE**
 - Before cleaning, unplug the unit, pour out water from the unit, and let the unit cool down completely.
 - Wipe the outer surfaces of the unit with a damp cloth. Use soft detergents to remove dirt; do not use abrasive abrasives.
 - Do not immerse the thermo pot into water or other liquids.
 - Do not wash the unit in a dish washing machine.

Spots on the inner surface of the thermo pot.
Under the influence of different additives, contained in water, inner surface may change its color. You can remove such spots using citric acid or vinegar.

Scale removal
Scale, appearing inside the pot, influences water taste, and disturbs heat exchange between water and the heating element that can lead to its overheating and malfunction.

РУССКИЙ

THERMOPOT
Электрический термочайник предназначен только для кипячения воды. Для того чтобы правильно и безопасно пользоваться устройством, внимательно изучите данное руководство.

ОПИСАНИЕ

1. Отметка необходимости долива воды «REFILL»
2. Шкала уровня воды
3. Кнопка включения подачи воды
4. Носик слива воды
5. Панель управления
6. Кнопка открытия крышки
7. Отсек выхода пара
8. Алюминевая крышка
9. Место крепления крышки
10. Телескопическая стойка
11. Корпус
12. Разъем для подключения сетевого шнура
13. Вращающаяся подставка
14. Отметка максимального уровня «FULL»
15. Сетевой шнур

Панель управления:
16. Кнопка выбора температуры подогрева воды «TEMPSET/Выбор температуры»
17. Индикатор временного отключения/остывания «TEMP DECLINING/Отключение/Остывание»
18. Кнопка повторного кипячения/отключения «RE-BOIL/Кипячение/Повторное кипячение»
19. Индикатор режима кипячения воды «BOILING/Кипячение»
20. 98°C указание температуры кипения
21. 85°C указание температуры кипения
22. Индикатор температуры кипения
23. Индикатор температуры кипения
24. Кнопка открытия крышки
25. Индикатор температуры кипения

Control panel:
16. "TEMPSET" button
17. "TEMP DECLINING" indication
18. "REBOIL" button
19. "BOILING" mode indication
20. 98°C indication
21. 85°C indication
22. Unlock indication
23. "DISPENSE" button
24. "UNLOCK" button
25. 65°C indication

ATTENTION!

Improper use of the unit may cause injuries or damages of the property.

OPERATING INSTRUCTIONS

IMPORTANT SAFEGUARDS

- Before switching the unit on, read these instructions carefully.
- Make sure that your home electricity supply corresponds to the voltage of current specified on the unit.
- The power cord is equipped with a euro plug, insert it into the socket with secure grounding.
- In order to avoid risk of fire, do not use adapters while connecting the appliance to the outlet.
- Do not plug or unplug the unit with wet hands, it is not allowed to electric shock or injuries.
- Hold the plug not the cord while unplugging the unit.
- Do not switch on the unit if it is empty.
- Never leave the operating unit unattended.
- Do not use the unit outdoors.
- Do not drop or decline the unit. In order to avoid getting burns, do not turn over the thermo pot.
- Use the thermo pot only for water boiling, do not use to heat or boil other liquids.
- Provide that water level is not below the "REFILL" mark and not higher than the "FULL" mark.
- Do not fill the thermo pot putting it under tap water - use a special cup for it.
- Put the unit on the flat stable surface.
- Do not use the unit near walls and furniture. Steam that goes out may lead to deformation or other damages of the walls and furniture.
- Do not use the unit near heat sources or open flame.
- Close supervision is necessary when children or disabled persons are near the unit. This unit is not intended for use by children or disabled persons unless they are given all necessary instructions on safety measures and information about danger, which can be caused by improper use of the unit.
- Never leave children to use the unit as a toy.
- Keep the unit out of reach of children.
- Provide that the power cord is not hanging over the table and make sure that it does not touch heated surfaces.
- Do not open the lid while boiling and do not supply water.
- Do not rotate the unit while supplying water.
- Do not make efforts to close the lid. Close the lid firmly.
- Keep your hands away from steam openings otherwise you can get burns. Do not block steam openings with foreign objects.
- Do not touch hot surfaces of the thermo pot.
- When the thermo pot is filled with the thermo pot filled with boiling water, do not touch the lid opening button. Make sure that the lid is closed and locked.
- Do not carry the lid while holding the lid opening button.
- To pour out the remaining hot water, remove the lid. Be careful while pouring out hot water.
- In order to avoid electric shock, do not immerse the unit into water or other liquids.
- Always switch off and unplug the unit if it is not being used or before cleaning.
- Do not wash the unit in a dish washing machine.
- Before taking the unit away for keeping, unplug it, pour out water and let it cool down for 5 minutes.
- Regularly check the power cord and the plug.
- Do not use the thermo pot if there are damages in the power cord.
- Do not repair the unit yourself. It may cause fire, electric shock, or injuries. If there are some damages in the unit, contact an authorized service center.
- The unit is intended for household use only.

FIRST USAGE
1. Unpack the thermo pot.
2. Before switching on the unit, make sure that your home electricity supply corresponds to the voltage of current specified on the unit.

3. Open the lid (8), by pressing the (6) button and holding the lid.
4. Fill the pot with water, using a special cup, do not overfill, fill to the (14) "FULL" mark.
5. Insert the power cord plug (15) into the outlet (12) on the case, and the plug into the socket. The thermo pot will switch on into the boiling mode, the (19) "BOILING" indication will light up on the control panel (5).
6. After water starts boiling, the unit will switch to the temperature keeping mode, the indication (21) will be flashing.
7. Pour out water, press the (24) "UNLOCK" button to unlock water dispensing pump, the indication (22) will light up.

Attention!
Water is dispensed only when the (22) indication is on, lock/unlock is switched on by the (24) "UNLOCK" button. If during 10 seconds after the (24) "UNLOCK" button is pressed, water supply will not be performed, the thermo pot locking will switch on automatically, the indication (22) will go out.

- After use, pour out water from the unit, unplug it, let the unit cool down completely and take it away for keeping.
- CLEANING AND CARE**
 - Before cleaning, unplug the unit, pour out water from the unit, and let the unit cool down completely.
 - Wipe the outer surfaces of the unit with a damp cloth. Use soft detergents to remove dirt; do not use abrasive abrasives.
 - Do not immerse the thermo pot into water or other liquids.
 - Do not wash the unit in a dish washing machine.

Spots on the inner surface of the thermo pot.
Under the influence of different additives, contained in water, inner surface may change its color. You can remove such spots using citric acid or vinegar.

Scale removal
Scale, appearing inside the pot, influences water taste, and disturbs heat exchange between water and the heating element that can lead to its overheating and malfunction.

КАЗАК

THERMOPOT
Электрический термочайник (термопот) тек суды қайнатуға арналған. Электр қорығының дұрыс және қауіпсіз пайдалану үшін біздің құрылғымызды, анықталған ережелерді оқыңыз.

СЫПАТТАМАСЫ

1. «REFILL» суды толықтыруға қажеттілігін белгілейтін белгісі
2. Судың деңгейі мен судың деңгейін бақылау шкаласы
3. Судың деңгейін бақылау шкаласы
4. Судың деңгейі
5. Судың деңгейі
6. Судың деңгейі
7. Судың деңгейі
8. Судың деңгейі
9. Судың деңгейі
10. Судың деңгейі
11. Судың деңгейі
12. Судың деңгейі
13. Судың деңгейі
14. Судың деңгейі
15. Судың деңгейі

Басқару тастасы:
16. «TEMPSET/Температураны таңдау»
17. «TEMP DECLINING/Температураны азайту»
18. «REBOIL/Қайнату»
19. «BOILING/Кипіну»
20. 98°C судың деңгейі
21. 85°C судың деңгейі
22. Судың деңгейі
23. Судың деңгейі
24. Судың деңгейі
25. Судың деңгейі

Control panel:
16. "TEMPSET" button
17. "TEMP DECLINING" indication
18. "REBOIL" button
19. "BOILING" mode indication
20. 98°C indication
21. 85°C indication
22. Unlock indication
23. "DISPENSE" button
24. "UNLOCK" button
25. 65°C indication

ATTENTION!

Improper use of the unit may cause injuries or damages of the property.

